 
 


## Passive wireless sensors

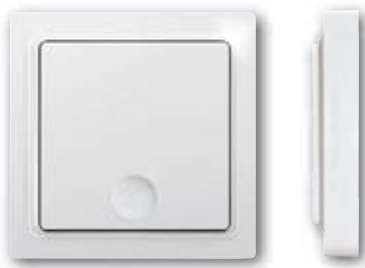

**TF-1FT**

**Tap-radio® wireless pushbutton**



**1-way wireless flat pushbutton for single mounting 84x84x16 mm or mounting into the E-design switching system. Generates the power for wireless telegrams itself when the button is pressed, therefore there is no connecting wire and no standby loss. Smart Home sensor.**

Wireless pushbuttons with one rocker can send one evaluable signal. Press the bottom of the rocker near the mark.

The mounting base can be screwed onto a flat surface or glued to the wall, on glass or on furniture using the enclosed adhesive foil. Use the sleeves in the 55 mm socket box for screw mounting.




private series

**TF-1FT**

1-way wireless pushbutton

EAN 4010312317198

 **30,50 €/pc.**

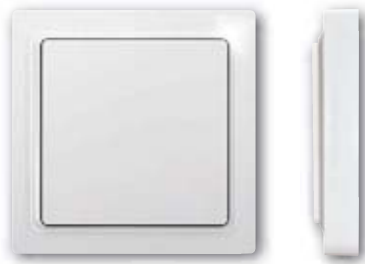

Pushbutton with rocker

**TF-2FT**

**Tap-radio® wireless pushbutton**



**2-way wireless pushbutton pure white glossy for single mounting 84x84x16 mm or mounting into the E-design switching system. Generates the power for wireless telegrams itself when the button is pressed, therefore there is no connecting wire and no standby loss. Smart Home sensor.**

**The scope of supply comprises a rocker.**

Wireless pushbuttons with one rocker can transmit two evaluable signals: press rocker up and press rocker down.

The mounting base can be screwed onto a flat surface or glued to the wall, on glass or on furniture using the enclosed adhesive foil. Use the sleeves in the 55 mm socket box for screw mounting.



private series

**TF-2FT**

2-way wireless pushbutton

EAN 4010312320402

 
**35,90 €/pc.**



Pushbutton with rocker

**TF-4FT**

**Tap-radio® wireless pushbutton**



**4-way wireless pushbutton pure white glossy for single mounting 84x84x16 mm or mounting into the E-design switching system. Generates the power for wireless telegrams itself when the button is pressed, therefore there is no connecting wire and no standby loss. Smart Home sensor.**

**The scope of supply comprises a rocker and a double rocker.**

Wireless pushbuttons with one rocker can transmit two evaluable signals: press rocker up and press rocker down. Wireless pushbuttons with double rocker can transmit four evaluable signals: press two rockers up or down. The mounting base can be screwed onto a flat surface or glued to the wall, on glass or on furniture using the enclosed adhesive foil. Use the sleeves in the 55 mm socket box for screw mounting.

The double rocker is snapped onto the wireless module at the factory. If the double rocker is replaced by the large rocker, remove the rocker halves by pulling off to the front. Do not bend towards the middle. Then snap the large rocker so that the markings 0 and I on the back line up with the same markings on the wireless module.



Pushbutton with double rocker



private series

**TF-4FT**

4-way wireless pushbutton

EAN 4010312317105

**35,90 €/pc.**